

A			
A/C Switch.....	55-76	Replacement (rear suspension, upper arm).....	34-12
ABS		Replacement (rear suspension, trailing arm).....	34-15
Actuator Test.....	35B-107	Replacement (rear suspension, stabilizer bar).....	34-28
Circuit Diagram.....	90-104	Replacement (front suspension).....	33A-16
ECU, Check at Terminal.....	35B-108	Ball Joint Dust Cover Inspection	
Accelerator Cable		Steering.....	37-21
Check and Adjustment.....	17-4	Ball Joint Dust Cover Replacement	
Accelerator Cable and Pedal.....	17-5	Steering.....	37-45
Accessory Socket.....	54A-105	Ball Joint Seals	
Adhesive		Check.....	00-47
Body.....	42-70	Barometric Pressure Sensor	
Brakes (Basic).....	35A-37	Check.....	17-15
Engine.....	11A-65	Basic Brake System	
Engine Cooling.....	14-34	Diagnosis.....	35A-3
Engine Lubrication.....	12-7	Basic Idle Speed	
Engine Overhaul.....	11B-74	Adjustment.....	13A-760
Exterior.....	51-36	Battery	
Manual Transaxle Overhaul.....	22B-52	Check.....	54A-3
MFI.....	13A-785	Handling.....	00E-12
Propeller Shaft.....	25-13	Remedy for a Discharged Battery.....	35B-117
Rear Axle.....	27-54	Belt	
Steering.....	37-54	Water Pump and Generator Drive Belt Check.....	00-37
Adhesive Table.....	00-53	Belt, Timing	
Adhesives		Replace.....	00-37
Equipment.....	54A-151	BJ Boot	
Air Bag Module		Replacement.....	26-20
Disposal Procedures.....	52B-197	Bleeding	
Air Bag Module(s).....	52B-184	Brakes (Basic).....	35A-15
Air Cleaner.....	15-7	Power Steering.....	37-19
Air Cleaner Element		Blower.....	55-81
Replace.....	00-36	Blower Assembly.....	55-79
Air Conditioning		Blower Resistor	
Charging.....	55-71	Removal and Installation.....	55-82
Compressor Drive Belt Adjustment.....	55-71	Body	
Compressor Noise Check.....	55-74	Adhesive.....	42-70
Condenser and Condenser Fan Motor.....	55-92	Diagnosis.....	42-4
ECU Terminal Check.....	55-69	Sealant.....	42-70
Idle-up Operation Check.....	55-75	Boots	
Manual, Circuit Diagram.....	90-86	Driveshaft, Check.....	00-47
Performance Test.....	55-72	Brake Booster.....	35A-24
Power Relay Check.....	55-74	Brake Booster	
Pressure Switch Check.....	55-71	Operating Check.....	35A-14
Receiver Drier Test.....	55-71	Removal and Installation.....	35A-24
Refrigerant Leak Repair.....	55-73	Brake Disc	
Refrigerant Line.....	55-94	Pad Wear Check.....	00-46
Sight Glass Refrigerant Level Test.....	55-70	Runout Check and Correction.....	35A-20
Air Dam.....	51-8	Thickness Check.....	35A-19
Air Dam.....	51-7	Brake Fluid Level Sensor Check.....	35A-16
Antenna.....	54A-148	Brake Hoses	
Anti-Lock Braking System (ABS)		Check.....	00-46
Diagnosis.....	35B-4	Brake Pad	
Anti-Theft Code for Anti-Theft System		Wear Check.....	00-46
Procedure for Input.....	54A-143	Brake Pedal.....	35A-22
Audio System		Brake Pedal	
Circuit Diagram.....	90-100	Check and Adjustment.....	35A-12
Auto-tensioner		Removal and installation.....	35A-22
Check.....	11A-8	Brake Rotor	
		Disc, Check.....	35A-18
		Brake Warning Light	
		Circuit Diagram.....	90-72
		Brakes (Basic)	
		Adhesive.....	35A-37
		Sealant.....	35A-37
		Bumper	
		Front.....	51-2
		Rear.....	51-5

B

Backup Light	
Circuit Diagram.....	90-63
Ball Joint Dust Cover	
Inspection.....	34-7

C

Cable			
Accelerator	17-5		
Accelerator, Check and Adjustment	17-4		
Ignition, Replace	00-37		
Camshaft	11A-28		
Camshaft			
Overhaul	11B-29		
Camshaft Position Sensor	16-39		
Camshaft Position Sensor			
Check	16-35		
Canister			
Evaporative Emission	17-21		
Catalytic Converter	17-24		
Caution Labels	55-4		
Center Differential	22B-45		
Centermember	32-6		
Central Door Locking System	54B-82		
Central Door Locking System			
Circuit Diagram	90-78		
Diagnosis	42-23		
Centralized Junction			
Circuit Diagram	90-18		
Charge Air Cooler	15-8		
Charging System	16-2		
Charging System			
Circuit Diagram	90-31		
Diagnosis	16-4		
Check Valve			
Check	17-15		
Operating Check	35A-14		
Cigarette Lighter	54A-105		
Cigarette Lighter			
Circuit Diagram	90-103		
Clearance Around Hood			
Adjustment	42-6		
Clock	54A-106		
Clock			
Circuit Diagram	90-99		
Clock Spring	52B-184		
Clutch	21B-2		
Clutch			
Diagnosis	21A-2		
Inspection	21B-4		
Clutch Bleeding	21A-8		
Clutch Control	21A-12		
Clutch Control			
Inspection	21A-12		
Clutch Housing	22B-40		
Clutch Housing			
Disassembly and Assembly	22B-40		
Clutch Master Cylinder			
Inspection	21A-14		
Clutch Pedal	21A-10		
Clutch Pedal			
Check and Adjustment	21A-7		
Inspection	21A-11		
Clutch Release Cylinder	21B-6		
Clutch Release Cylinder			
Inspection	21B-7		
Column Switch	54A-100		
Column Switch			
Removal and Installation	54A-101		
Combination Meters	54A-54		
Combination Meters			
Removal and Installation	54A-81		
Compression Pressure			
Check	11A-14		
Compressor (A/C)			
Noise Check	55-74		
Compressor Assembly	55-87		
Connecting Rod			
Overhaul	11B-54		
Connector Inspection	00E-2		
Control Housing	22B-37		
Control Housing			
Disassembly and Assembly	22B-37		
Control Unit Location	70-12		
Coolant			
Engine, Change	00-44		
Cooling System			
Circuit Diagram	90-42		
Crankcase Ventilation System			
Check	17-11		
Crankshaft			
Overhaul	11B-63		
Crankshaft Oil Seal	11A-41		
Crankshaft Position Sensor	16-40		
Crankshaft Position Sensor			
Check	17-19		
Crankshaft Pulley	11A-26		
Crossmember	33A-23		
Crossmember			
Inspection	32-11		
Cylinder Block			
Overhaul	11B-63		
Cylinder Head			
Overhaul	11B-35		
Cylinder Head Gasket	11A-44		

D

Diagnosis			
Anti-Lock Braking System (ABS)	35B-4		
Basic Brake System	35A-3		
Body	42-4		
Central Door Locking System	42-23		
Charging System	16-4		
Clutch	21A-2		
Door	42-23		
Emission Control System	17-7		
Engine	11A-2		
Engine Control System	17-3		
Engine Cooling	14-3		
Front Axle	26-2		
Front Suspension	33A-3		
Fuel Supply	13B-2		
Immobilizer System	54A-7		
Intake and Exhaust	15-2		
Keyless Entry System	42-54		
Manual Transaxle	22A-4		
Multiport Fuel Injection (MFI)	13A-6		
Parking Brake	36-2		
Power Steering	37-3		
Power Window	42-23		
Propeller Shaft	25-2		
Radio With Tape Player and CD Player, Speaker and Antenna	54A-107		
Rear Axle	27-2		
Rear Suspension	34-4		
Seat Belt	52A-2		
SRS Air Bag	52B-20		
Starting System	16-22		
Sunroof	42-60		
SWS	54B-6		
Tire	31-2		
Trouble Code, ABS	35B-4		
Trunk Lid	42-47		
Wheel	31-2		

Window Glass.....	42-13	Check for Leaks.....	00-36
Differential Carrier		Engine	
Rear.....	27-28	Adhesive.....	11A-65
Differential Carrier Oil Seal		Assembly.....	11A-18
Replacement.....	27-13	Auto-tensioner.....	11A-8
Differential Support Member Bushing		Compression Pressure.....	11A-14
Replacement.....	27-30	Crankshaft Oil Seal.....	11A-41
Disc Brake		Cylinder Head Gasket.....	11A-44
Pad Wear Check.....	00-46	Diagnosis.....	11A-2
Disc Brake Assembly		Drive Belt.....	11A-7
Front.....	35A-27	Idle Mixture.....	11A-12
Rear.....	35A-31	Idle Speed.....	11A-13
Disc Brake Pad		Ignition Timing.....	11A-11
Check and Adjustment.....	35A-16	Lash Adjuster.....	11A-15
Disc Brake Rotor		Manifold Vacuum.....	11A-15
Check.....	35A-18	Sealant.....	11A-65
Dome Light.....	54A-95	Tightening Specification(s).....	11A-63
Door.....	42-23	Timing Belt.....	11A-50
Removal and installation.....	42-34	Engine Control.....	17-3
Door		Engine Control System	
Diagnosis.....	42-23	Diagnosis.....	17-3
Front and Rear, Fit Adjustment.....	42-29	Engine Coolant	
Glass and Regulator.....	42-36	Change.....	00-44
Handle and Latch.....	42-41	Concentration Check.....	14-19
Inside Handle Play Adjustment.....	42-33	Leak Check.....	14-17
Mirror.....	51-31	Replacement.....	14-18
Opening Weather-strip.....	42-45	Engine Coolant Temperature Gauge Unit	
Outside Handle Play Adjustment.....	42-33	Check.....	54A-80
Switch Check.....	42-35	Engine Coolant Temperature Sensor	
Door Trim		Check.....	17-19
Removal and Installation.....	52A-13	Check.....	13A-769
Drive Belt		Engine Cooling	
Power Steering, Tension Check.....	37-18	Adhesive.....	14-34
Tension Check and Adjustment.....	11A-7	Diagnosis.....	14-3
Water Pump and Generator Drive Belt Check.....	00-37	Sealant.....	14-34
Drive Plate		Engine Lubrication	
Overhaul.....	11B-63	Adhesive.....	12-7
Driveshaft		Sealant.....	12-7
BJ Boot Replacement.....	26-20	Tightening Specification(s).....	12-7
Front Axle.....	26-13	Engine Mounting.....	32-3
Rear Axle.....	27-21	Engine Mounting	
Driveshaft Boots		Inspection.....	32-4
Check.....	00-47	Engine Oil	
Drum		Change.....	00-40
Inspection.....	36-9	Check.....	12-3
		Replacement.....	12-3
		Engine Oil Cooler.....	12-6
		Engine Oil Filter	
		Change.....	00-41
		Replacement.....	12-4
		Engine Oil Pressure	
		Check.....	12-4
		Engine Overhaul	
		Adhesive.....	11B-74
		Sealant.....	11B-74
		Tightening Specification(s).....	11B-69
		Engine Roll Stopper.....	32-6
		Engine-ECU.....	13A-783
		ETACS	
		Enabling/Disabling the Answerback Function.....	42-55
		Evaporative Emission Canister.....	17-21
		Evaporative Emission Control System.....	17-12
		Evaporative Emission Control System	
		Check for Clogging.....	00-36
		Check for Leaks.....	00-36
		Purge Solenoid Check.....	17-14
		Evaporative Emission Purge Solenoid	
		Check.....	13A-776
		Evaporative Emission Ventilation Solenoid	
		Check.....	13A-776
		Check.....	17-15
E			
ECU Terminal			
Check.....	54B-538		
EGR			
Solenoid Check.....	13A-776		
EGR solenoid			
Check.....	13A-776		
EGR System.....	17-16		
EGR System			
Check.....	17-17		
Port Vacuum Check.....	17-18		
Solenoid Check.....	17-18		
Valve Check.....	17-18		
Electrical System			
Check.....	00E-13		
Element, Air Cleaner			
Replace.....	00-36		
Emission Control.....	17-7		
Emission Control System			
Diagnosis.....	17-7		
Emission Control System, Evaporative			
Check for Clogging.....	00-36		

Evaporator Assembly	55-85
Evaporator Unit	55-79
Exhaust Manifold	15-16
Exhaust Manifold	
Overhaul	11B-25
Exhaust Pipe	15-23
Exhaust System	
Check	00-40
Exterior	
Adhesive	51-36
Diagnosis	51-14
Sealant	51-36

F

Fan Control Relay	
Continuity Check	14-21
Fan Controller	
Check	14-20
Fastener Tightening Specification(s)	34-29
Fender	42-8
Filter	
Engine Oil, Change	00-41
Flasher Timer	54B-336
Flywheel	
Overhaul	11B-63
Fog Light	54B-371
Fog Light	
Circuit Diagram	90-58
Front Axle	
Diagnosis	26-2
Driveshaft	26-13
Hub	26-8
Front Axle Hub Assembly	26-8
Front Axle Hub Assembly	
Disassembly and Assembly	26-11
Inspection	26-12
Front Floor Console	52A-7
Front Impact Sensors	52B-179
Front Seat	52A-20
Front Seat Belt	52A-24
Front Side Marker Light	54A-83
Front Suspension	
Diagnosis	33A-3
Fuel Filler Lid	42-11
Fuel Gauge Unit	
Check	13B-11
Check	54A-78
Replacement	13B-11
Fuel Hose	
Check for Condition	00-35
Fuel Pipe	
Check for Leaks	00-35
Fuel Pressure Test	13A-762
Fuel Pump	
Connector Disconnection	13A-765
Operation Check	13A-766
Operation Check	13B-10
Fuel Pump Module	13B-18
Fuel Pump Module	
Replacement	13B-10
Fuel Pump Relay	
Continuity Check	13A-768
Fuel Pump System	13A-671
Fuel Supply	
Diagnosis	13B-2
Fuel System	
Check for Leaks	00-35
Fuel Tank	13B-14

Fuel Tank	
Check for Leaks	00-35
Fuel Tank Differential Pressure Sensor	
Check	17-15
Fuel Tank Filler Tube	
Check for Leaks	00-35
Fuel Tank Pressure Relief Valve	17-21
Fuel Tank Pressure Relief Valve	
Inspection	17-22
Fuel Warning Light	
Circuit Diagram	90-72
Fuse	
Check	00E-11
Fuses Location	70-5
Fusible Links Location	70-5

G

Garnish	51-7
Gauge	
Circuit Diagram	90-68
Generator	11B-5
Generator	
Assembly	16-14
Output Current Test	16-8
Output Line Voltage Drop Test	16-7
Regulated Voltage Test	16-10
Glass Sliding Mechanism	
Check and Adjustment	42-31
Ground Location	70-2
Grounding Location	70-4
G-sensor	35B-122

H

Hazard Warning Light	
Circuit Diagram	90-64
Hazard Warning Switch	54A-97
Headlight (SWS)	54B-276
Headlight	54A-83
Headlight	
Aiming	54A-85
Circuit Diagram	90-44
Headlight Leveling System	
Circuit Diagram	90-48
Headlining	52A-18
Heater	
Blower	55-82
Resistor	55-82
Heater Control	
Disassembly and Assembly	55-78
Heater Control Assembly	55-76
Heater Core	55-79
Heater Unit	55-80
Heater Unit	55-79
High-Mounted Stoptlight	54A-96
Hood	42-4
Hood	
Aliment	42-6
Hood Striker	
Alignment	42-6
Horn	54A-102
Horn	
Circuit Diagram	90-61
Hose	
Vacuum, Routing	17-8
Hoses	
Brake, Check	00-46

Hub			
Front Axle	26-8		
Rear Axle	27-14		
Hub Bolt			
Replacement (front axle)	26-7		
Replacement (rear axle)	27-13		
Hub End Play			
Check	26-6		
Hydraulic Unit	35B-118		
Hydraulic Unit Check			
ABS	35B-114		
I			
Idle Mixture			
Check	11A-12		
Idle Speed			
Basic, Adjustment	13A-760		
Check	11A-13		
Idle Speed Control Motor			
Check	13A-774		
Ignition Cable			
Replacement	00-37		
Ignition Coil	16-39		
Ignition Coil			
Check	16-33		
Ignition Key Reminder Warning Buzzer			
Circuit Diagram	90-122		
Ignition Switch	54A-5		
Ignition System	16-32		
Ignition System	11B-5		
Ignition system	13A-688		
Ignition System			
Circuit Diagram	90-30		
Ignition Timing			
Check	11A-11		
Immobilizer System			
Circuit Diagram	90-116		
Diagnosis	54A-7		
Injector	13A-777		
Injector			
Check	13A-773		
Input Shaft	22B-14		
Input Shaft			
Inspection	22B-21		
Inside Rear View Mirror	52A-19		
Inspection Terminal Location	70-7		
Instrument Panel	52A-3		
Instrument Panel Inspection	00E-8		
Intake Air Temperature Sensor			
Check	13A-769		
Check	17-15		
Intake and Exhaust			
Diagnosis	15-2		
Intake Manifold	15-13		
Intake Manifold	11B-23		
Intake Manifold Vacuum			
Check	15-4		
Interior Light	54B-392		
Interlock Switch			
Check and Adjustment	21A-9		
Operating Check	21A-9		
J			
Joint Connector	90-12		
Junction Block	90-10		
K			
Keyless Entry System (SWS)	54B-171		
Keyless Entry System	42-54		
Keyless Entry System			
Diagnosis	42-54		
Secret Code Registration	42-58		
Transmitter Battery Replacement	42-55		
Keyless Entry System Timer			
Lock Function Inspection	42-55		
Knock Sensor	16-41		
Knuckle			
Inspection	27-20		
Rear Axle	27-19		
L			
Lash Adjuster			
Check	11A-15		
Leveling Valve			
Check	13B-13		
License Plate Light	54A-97		
License Plate Light			
Circuit Diagram	90-50		
Lighting Monitor Buzzer			
Circuit Diagram	90-118		
Lighting System			
Diagnosis	54A-83		
Lower Arm	33A-14		
Lower Arm			
Inspection	33A-15		
Lower Arm Ball Joint			
End Play Check	33A-8		
Lower Arm Bushing			
Replacement	33A-17		
Luminous Intensity			
Measurement	54A-89		
M			
Main Muffler	15-23		
Maintenance			
Air Cleaner Element	00-36		
Ball Joint and Steering Linkage Seals	00-47		
Brake Hoses	00-46		
Disc Brake Pads	00-46		
Drive Belt	00-37		
Driveshaft Boots	00-47		
Electrical System	00E-13		
Engine Coolant	00-44		
Engine Oil	00-40		
Engine Oil Filter	00-41		
Evaporative Emission Control System	00-36		
Exhaust System	00-40		
Fuel Hose	00-35		
Fuel System	00-35		
Ignition Cable	00-37		
Spark Plug	00-36		
SRS	00-48		
Timing Belt	00-37		
Transfer Oil	00-43		
Manifold Vacuum			
Check	11A-15		

Manual A/C			
Diagnosis.....	55-5		
Manual Transaxle			
Diagnosis.....	22A-4		
Manual Transaxle (Transmission)			
Oil Level Check.....	00-42		
Manual Transaxle Overhaul			
Adhesive.....	22B-52		
Sealant.....	22B-52		
Mark.....	51-29		
Master Cylinder.....	35A-24		
Master Cylinder			
Function Check.....	35A-21		
Master Cylinder Assembly.....	35A-24		
Master Cylinder Assembly			
Disassembly and Assembly.....	35A-26		
Inspection.....	35A-27		
Meter			
Circuit Diagram.....	90-68		
MFI			
Adhesive.....	13A-785		
Sealant.....	13A-785		
Tightening Specification(s).....	13A-783		
MFI System			
Circuit Diagram.....	90-32		
Mirror			
Door.....	51-31		
Remote Controlled, Circuit Diagram.....	90-91		
Module			
Fuel Pump.....	13B-18		
Molding.....	51-7		
Mounting			
Engine.....	32-3		
Transaxle.....	32-5		
Multipoint Fuel Injection			
Diagnosis.....	13A-6		
Multipoint Fuel Injection Relay			
Continuity Check.....	13A-767		
		O	
Oil			
Engine, Change.....	00-40		
Engine, Check.....	12-3		
Engine, Replacement.....	12-3		
Transfer, Change.....	00-43		
Oil Cooler			
Engine.....	12-6		
Oil Filter			
Engine, Replacement.....	12-4		
Oil Pan.....	11A-38		
Oil Pan			
Inspection.....	11A-40		
Overhaul.....	11B-44		
Oil Pressure			
Engine, Check.....	12-4		
Oil Pump			
Overhaul.....	11B-44		
Power Steering.....	37-46		
Power Steering, Pressure Test.....	37-19		
Oil Seal			
Crankshaft.....	11A-41		
Oil Warning Light			
Circuit Diagram.....	90-72		
Output Shaft.....	22B-23		
Output Shaft			
Inspection.....	22B-31		
Oxygen Sensor			
Check.....	13A-771		
		P	
Parking Brake			
Cable.....	36-7		
Diagnosis.....	36-2		
Lever.....	36-6		
Lever Stroke Check and Adjustment.....	36-4		
Lining and Drum.....	36-8		
Lining Running-in.....	36-5		
Switch Check.....	36-5		
Parking Brake Lining			
Inspection.....	36-9		
PCV (Positive Crankcase Ventilation) System.....	17-10		
PCV (Positive Crankcase Ventilation) System			
Valve Check.....	17-11		
Pedal			
Accelerator.....	17-5		
Piston			
Overhaul.....	11B-54		
Position Light.....	54A-83		
Position Light			
Circuit Diagram.....	90-50		
Power Distribution System			
Circuit Diagram.....	90-24		
Power Steering			
Bleeding.....	37-19		
Diagnosis.....	37-3		
Drive Belt Tension Check.....	37-18		
Fluid Level Check.....	37-18		
Fluid Replacement.....	37-18		
Hoses.....	37-48		
Oil Pump Assembly.....	37-46		
Oil Pump Pressure Test.....	37-19		
Pressure Switch Check.....	37-20		
Power Steering Diagnosis.....	37-3		
Power Steering Gear Box.....	37-29		
Power Steering Linkage.....	37-29		
Power Steering Oil Pump Assembly			
Inspection.....	37-48		
Power Window			
Circuit Breaker Inspection.....	42-32		
Circuit Diagram.....	90-74		
Diagnosis.....	42-23		
Operating Current Check.....	42-32		
Relay Check.....	42-32		
Power Windows.....	54B-114		
Printed-Heater Lines			
Check.....	54A-149		
Propeller Shaft.....	25-4		
Propeller Shaft			
Adhesive.....	25-13		
Diagnosis.....	25-2		
Sealant.....	25-13		
Purge Control System			
Check.....	17-13		
		R	
Radiator.....	14-22		
Radiator Cap			
Pressure Check.....	14-18		
Radio.....	54A-107		
Radio With Tape Player and CD Player, Speaker and Antenna			
Diagnosis.....	54A-107		
Rear Axle			
Adhesive.....	27-54		
Diagnosis.....	27-2		
Driveshaft.....	27-21		
Gear Oil Level Check.....	27-12		
Hub.....	27-14		
		R	

Knuckle.....	27-19	Seat Belts With Pre-Tensioner	
Sealant.....	27-54	Check.....	52B-196
Total Backlash Check.....	27-12	Select Lever.....	22B-36
Wheel Bearing End Play Check.....	27-12	Sensor	
Rear axle oil		Barometric Pressure, Check.....	17-15
Level Check.....	00-47	Camshaft Position.....	16-39
Rear Combination Light.....	54A-94	Camshaft Position, Check.....	16-35
Rear Floor Console.....	52A-8	Crankangle, Check.....	16-35
Rear Seat.....	52A-22	Crankshaft Position.....	16-40
Rear Seat Belt.....	52A-25	Crankshaft Position, Check.....	17-19
Rear Spoiler.....	51-12	Engine Coolant Temperature, Check.....	17-15
Rear Suspension.....	34-8	Engine Coolant Temperature, Check.....	13A-769
Rear Suspension		Fuel Tank Differential Pressure, Check.....	17-15
Diagnosis.....	34-4	Intake Air Temperature, Check.....	13A-769
Rear Washer.....	54B-243	Intake Air Temperature, Check.....	17-15
Rear Wheel Alignment		Knock.....	16-41
Check and Adjustment.....	34-6	Oxygen, Check.....	13A-771
Rear Window Defogger.....	54A-149	Throttle Position, Adjustment.....	13A-758
Rear Window Defogger		Throttle Position, Check.....	13A-770
Circuit Diagram.....	90-95	Volume Air Flow, Check.....	17-15
Rear Window Glass.....	42-20	Wheel Speed, Output Voltage Check.....	35B-112
Rear Wiper.....	54B-243	Sensor Location.....	70-8
Rear Wiper and Washer		Shift Lever Assembly.....	22A-14
Inspection.....	51-27	Shift Lever Assembly	
Receiver Drier Test (A/C).....	55-71	Disassembly and Assembly.....	22A-14
Relay		Shock Absorber.....	34-21
Check.....	00E-10	Shock Absorber Assembly	
Relay Location.....	70-6	Disassembly and Assembly.....	34-22
Replaceable Bulb		Side Marker Light	
Replacement.....	54A-90	Circuit Diagram.....	90-50
Resistive Cord		Sight Glass (Refrigerant Level Test).....	55-70
Inspection.....	16-34	Solenoid	
Reverse Idler Gear.....	22B-34	EGR, Check.....	13A-776
Rheostat.....	54A-99	EGR, Check.....	17-18
Rheostat		Evaporative Emission Purge, Check.....	13A-776
Circuit Diagram.....	90-127	Evaporative Emission Ventilation, Check.....	13A-776
RKE (Keyless Entry System).....	42-54	Solenoid Location.....	70-16
RKE (Keyless Entry System)		Solenoid Valve Location.....	70-16
Secret Code Registration.....	42-58	Spark Plug	
Transmitter Battery Replacement.....	42-55	Check and Adjustment.....	16-35
Rocker Arm		Replace.....	00-36
Overhaul.....	11B-29	Speaker.....	54A-147
Roof Lid Glass		Speaker	
Operation Check.....	42-62	Test.....	54A-145
S			
Sealant		Specifications.....	34-29
Body.....	42-70	Speedometer Check	
Brakes (Basic).....	35A-37	Check.....	54A-77
Engine.....	11A-65	Speedometer Gear.....	22B-35
Engine Cooling.....	14-34	SRS	
Engine Lubrication.....	12-7	Circuit Diagram.....	90-110
Engine Overhaul.....	11B-74	Maintenance.....	52B-174
Equipment.....	54A-151	Maintenance.....	00-48
Exterior.....	51-36	SRS Air Bag	
Manual Transaxle Overhaul.....	22B-52	Diagnosis.....	52B-20
MFI.....	13A-785	SRS Control Unit (SRS-ECU).....	52B-182
Propeller Shaft.....	25-13	SRS Warning Light Check.....	52B-23
Rear Axle.....	27-54	Stabilizer Bar (front).....	33A-19
Steering.....	37-54	Stabilizer Bar (rear).....	34-26
Sealant Table.....	00-53	Stabilizer Bar	
Seat Belt		Removal and Installation.....	34-26
Diagnosis.....	52A-2	Starter Motor	
Seat Belt Pre-Tensioner		Assembly.....	16-24
Disposal Procedures.....	52B-197	Starter Relay	
Seat Belt Warning Light.....	54B-266	Check.....	16-23
Seat Belt Warning Light		Starting System.....	16-21
Circuit Diagram.....	90-120	Starting System	
Seat Belts With Pre-Tensioner.....	52B-192	Circuit Diagram.....	90-29
		Diagnosis.....	16-22
		Steering	
		Adhesive.....	37-54
		Ball Joint Dust Cover Inspection.....	37-21

Removal and Installation	37-23
Sealant	37-54
Steering Linkage Seals	
Check	00-47
Steering Shaft.....	37-25
Steering Wheel.....	37-23
Steering Wheel	
Free Play Check.....	37-15
Stationary Steering Effort Check.....	37-17
Steering Angle Check.....	37-16
Steering Wheel Return to Center Check	37-17
Stoplight	
Circuit Diagram.....	90-62
Strut Assembly	33A-9
Strut Assembly	
Disassembly and Assembly.....	33A-10
Inspection.....	33A-9
Strut Tower Bar.....	42-12
Sunroof.....	42-60
Sunroof (SWS).....	54B-189
Sunroof	
Circuit Diagram.....	90-124
Diagnosis.....	42-60
Fit Adjustment.....	42-61
Operation Check.....	42-63
Timer Function Check	42-61
Water Test	42-60
Switch	
Check	00E-9
SWS	
Diagnosis.....	54B-6
General Information.....	54B-2
SWS Monitor	
How to Use	54B-9

T

Tachometer	
Check	54A-78
Taillight	54B-276
Taillight	
Circuit Diagram.....	90-50
Tape Player	54A-107
Tension Pulley	55-87
Thermostat	14-24
Throttle Body	13A-780
Throttle Body	
Assembly.....	13A-779
Cleaning	13A-758
Throttle Position Sensor	
Adjustment.....	13A-758
Check	13A-770
Tie Rod End	
Steering, Ball Joint Breakaway Torque Check.....	37-16
Steering, Ball Joint Dust Cover Replacement.....	37-45
Tightening Specification(s)	
Basic Brakes.....	35A-35
Charging System	16-42
Clutch	21A-15
Clutch Overhaul.....	21B-8
Emission Control	17-25
Engine	11A-63
Engine Cooling.....	14-33
Engine Lubrication.....	12-7
Engine Overhaul.....	11B-69
Exterior	51-36
Front Axle	26-24
Front Suspension	33A-23
Fuel Supply.....	13B-22
Intake and Exhaust.....	15-24

Manual Transaxle	22A-25
MFI.....	13A-783
Power Plant Mount	32-12
Propeller Shaft.....	25-13
Rear Axle.....	27-52
Steering.....	37-52
Transaxle Overhaul.....	22B-51
Wheel and Tire.....	31-7
Tightening Torque.....	00-28
Timing Belt.....	11A-50
Timing Belt	
Overhaul	11B-7
Replace.....	00-37
Tire.....	31-6
Tire	
Diagnosis	31-2
Inflation Pressure Check.....	31-6
Rotation	00-53
Wear Check	31-6
Tone Alarm	54B-65
Trailing Arm	34-13
Transaxle (Transmission)	22B-6
Transaxle (Transmission)	
Inspection	22B-13
Transaxle (Transmission) Mounting	
Inspection	32-6
Transaxle Assembly	22A-21
Transaxle Control	22A-11
Transaxle Mounting	32-5
Transaxle Oil	
Level Check.....	22A-9
Replacement.....	22A-9
Transfer	22B-49
Transfer	
Oil Change.....	00-43
Transfer Assembly.....	22A-15
Transfer Oil	
Change	00-43
Check.....	22A-10
Replacement.....	22A-10
Transmission Case.....	22B-43
Transponder Lock	
Check.....	54A-48
Trims.....	52A-11
Trouble Code, ABS	
Diagnosis	35B-4
Trunk Lid.....	42-51
Trunk Lid	
Adjustment.....	42-49
Clearance Adjustment	42-50
Diagnosis	42-47
Trunk Lid Latch	
Inspection	42-54
Turbocharger	15-16
Turbocharger	
Intake Charge Pressure Check.....	15-4
Turbocharger Bypass Valve	
Check.....	15-6
Turbocharger Waste Gate Solenoid	
Check.....	15-5
Turn Signal Light	
Circuit Diagram	90-64

U

Upper Arm	34-10
-----------------	-------

V

Vacuum Check	
EGR Port	17-18
Vacuum Circuit Diagram.....	17-9
Vacuum Hose	
Check	17-10
Vacuum Hose Routing.....	17-8
Vacuum Hoses	17-8
Valve	
EGR System, Check.....	17-18
Fuel Tank Pressure Relief	17-21
Fuel Tank Pressure Relief, Inspection	17-22
Valve Stem Seal	11A-28
Vehicle Identification.....	00-16
Vehicle Identification Code Plate.....	00-17
Vehicle Speed Sensor	54A-81
Ventilators.....	55-95
Volume Air Flow Sensor	
Check	17-15

W

Waste Gate Actuator	
Check	15-4
Water Hose.....	11B-27
Water Hose.....	14-29
Water Pipe.....	14-29
Water Pump.....	14-27
Water Pump.....	11B-27
Wheel	31-6
Wheel	
Balance Accuracy.....	31-3
Diagnosis.....	31-2
Runout Check.....	31-6
Wheel Bearing End Play Check	27-12
Wheel Speed Sensor	
Output Voltage Check.....	35B-112
Wind Noise	
How to Locate.....	42-27
Window Glass	42-12
Window Glass	
Diagnosis.....	42-13
Door, Adjustment	42-30
Runchannel	42-45
Windshield.....	42-15
Windshield	
Wiper and Washer.....	51-14
Windshield Washer (SWS)	54B-205
Windshield Wiper (SWS).....	54B-205
Windshield Wiper	51-16
Windshield Wiper and Washer	
Circuit Diagram.....	90-92
Wiper and Washer	
Rear.....	51-24
Rear, Circuit Diagram	90-96
Windshield	51-14

NOTES